## Product information | Technical specification

Battery tester

www.aa-parts.com

fax: +39 (0)545 1885119 tel: +39 (0)545 41550 AA-Parts

BATTERY TESTER DWG

Corso Sforza, 110 - 48010 Cotignola (Ra) Italy © 2011 - AA-Parts - All right reserved email: engineering@aa-parts.com

Voltage precision: ±0.01V From 1S to 8S LiPo - Li-ion - LiMn - LiFe Unit voltage display range: da 0.5 a 4.5V Weight: 12g Alarm set value range: OFF - da 2.7 a 3.8V Low voltage alarm mode: da 1S a 8S. Total voltage display range: da 0.5 a 36V


© 2011 - AA YAcht Sailing Hi Tech Parts — All right reserved

12,5

0.5 - 36 VDC - 15 mA RaHS**函公(**€

33

## Undervoltage setup button

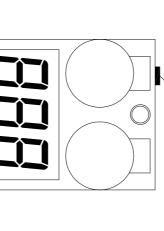



## Connection to the battery

- Connect the Battery Tester to the battery using
- the balance of the LiPo battery connector;
- the connector 0040.36 for the connection of any 0040.36 must be connected to a free channel of the receiver to pick up the supply voltage. battery to the Battery tester. The connector
- When you turn on the Battery Tester emits 4 beeps and is ready to read the battery voltage.
- 3. After switching on the following messages appear in sequence::
  BBB - indicates the loading control functions.
- 25 number of cells connected if utilizzo 0040.36 of the connector will only receive the message
- RLL read the value of the total battery voltage, followed by the value in volts.
- NOI read the value of the first cell, followed by the 0040.36 would be displayed only this message. value in volts - when the connector utlizzo

The information will continue to be displayed \입근 - read the value of the second cell, followed by 0040 36 this message will not be displayed the value in volts - when using the connector

## Setup of the minimum voltage and alarm

- Press the undervoltage setup button.
- 2. The display will show the value of the minimum set voltage (normally DFF).
- 3. Press the button to increase the value of the minimum voltage in steps of 0.1 V
- The values displayed are
- OFF no alarm set.
- 근 7 set undervoltage.
- 3.8 maximum voltage settable.

For each increase in voltage will hear a confirmation

Sheet Scale

battery tester connector 0040.36

BLACK

BLACK

Balance connector LiPo battery

<u>1</u>S



26,5



All dimensions are in mm

Dimensions unlisted Rays R 0 2

Bevels: 0.2x45°





Drawing	0040 35 00		
Material	:		
Surface finish	:		
Title	Battery tester		
Sheet	01 of 01		
Scale	1:1	A4R	